

TRIM-TEX

Mud Set Flat Tear Away Installation Instructions

MUD SET BEADS ARE DESIGNED TO BE INSTALLED WITH HIGH QUALITY DRYWALL COMPOUNDS. DO NOT INSTALL WITH SPRAY ADHESIVES, STAPLES, NAILS OR SCREWS.

Product Overview


Trim-Tex Mud Set Flat Tear Away Beads are designed for areas where the drywall has been butted too close to slip the return leg behind the wall. It features an extra long tear off strip and creates a finished edge where drywall terminates at other substrates or building components such as windows and doors.

Installation Instruction

Cut and dry fit the bead to verify proper length. **Do NOT install with spray adhesives, staples, nails or screws.** Apply mud/compound to bead or corner depending on installation method. Mud Set Beads are designed to be installed with high quality drywall compounds. Install your bead with a compound tube or blade/trowel. If using a compound tube, use Trim-Tex Mud Head #452 designed specifically for the Mud Set Tear Away Bead. Place your bead into place. Once in position, use the handle of your taping knife to pressure the mud legs to the drywall allowing the excess mud to escape. No need to wipe down the bead if you are applying the fill coat that same day.

Finishing:

First coat of mud can be applied immediately. Finish mudding, sanding and painting as you normally would. Priming is not required. Always use a high quality paint. For ultimate bond, add Mud-Max to all coats of mud.

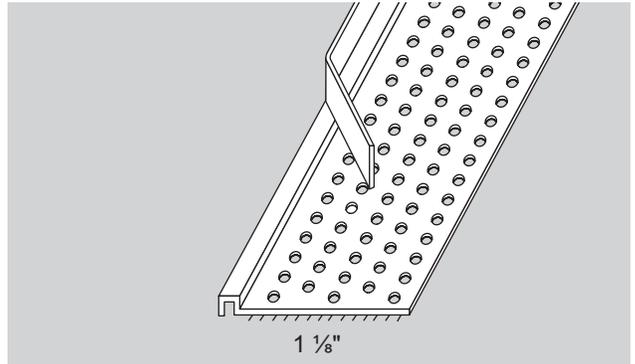

STOCK NUMBER	LENGTH	PCS PER BOX
MS9000XT	10'	50

