

TRIM-TEX

Rigid Closed Angle

Low Profile Bead

Installation Instructions

Product Overview

Trim-Tex Rigid Closed Angle Low Profile Bead is designed with a closed angle to ease the finishing of uneven framing. The smaller angle allows you to press the bead into place without splaying out the mud legs (as shown in Figure A&B.)

Installation Instructions

1. Cut the bead to length and dry fit over the corner while pressing the bead into place to ensure accurate installation.

2. For ultimate bond, spray a coat of 847 on the mud legs and the drywall. For single surface application, apply two medium coats to the drywall or the mud legs.


3. Install bead immediately and pressure the mud legs to the drywall. If the adhesive dries and there is no tack to it, apply additional coats of spray adhesive.

4. Once in position, press the nose of the bead into place to adjust for poor framing and staple the mud legs every 6"-8" with ½" long divergent staples (or closer as needed to ensure the legs sit proper.)

5. Mud as usual. Be sure to use All-Purpose or Multi-Purpose Compound. We do not recommend the use of Fast Setting Compounds. Add Mud-Max to your drywall compound for the ultimate performance. Prime and paint as usual

Quick Tip

For long runs with poor framing, snap a chalk line. Use a piece of the Closed Angle Bead to mark on the drywall where the chalk line should begin and end. Use the chalk line to position your bead for a straight installation.

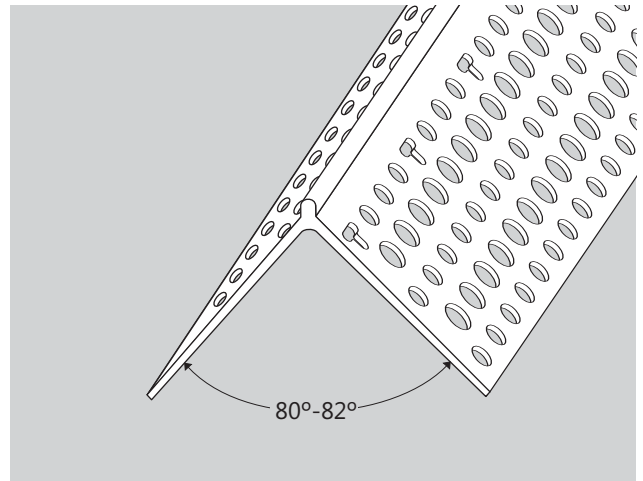

STOCK NUMBER	LENGTH	PCS PER BOX
R010CA	10'	45

